

### Funcțiile telecomenzii



Pornire lumina



Oprire lumina



MOD1: 100% - stins.  
Lumina la 100% la  
detectarea miscarii,  
stingere la incetarea  
miscarii



MOD2: 100%-30%.  
Lumina la 100% la  
detectarea miscarii,  
apoi la 30% la  
incetarea miscarii



MOD3: fara detectarea  
miscarii activata. Lumina se  
aprinde automat la inserat  
si se stinge la rasarit