

SPECIFICAȚII ȘI FISA TEHNICĂ:

Tip Corp de iluminat: Proiector LED

Tensiune de intrare: AC220-240V 50HZ/60HZ

Temperatura ambientală: -20°C<TA<50°C

Grad Protecție la apă: IP65

Detalii senzor: zona de detectare de 0-10M, raza detectie 120° grade, și se va opri în 30S după ce nu se mai detectează mișcare.

Senzor de mișcare de tip microwave. Senzorul este integrat în corpul de iluminat în partea stângă sus a produsului, privind din spate.

Lumina funcționează numai când luminozitatea ambientală este mai mică de 5-10 lux.

Porniți lumina la amurg și stingeți în zori când luminozitatea ambientală este de 5-10 lux.

AVERTIZARE:

1. ASIGURAȚI-VĂ CĂ FURNIZAREA CURENTULUI ELECTRIC ESTE OPRITĂ ÎNAINTE DE INSTALARE.

2. Citiți toate instrucțiunile următoare înainte de a instala produsul.

3. Utilizatorul trebuie să pregătească accesoriile și piese de schimb (nu sunt furnizate), inclusiv cutia de joncțiune dacă este necesară.

4. Împământarea este necesară.

5. În cazul deteriorării scutului de siguranță, trebuie să îl înlocuiți imediat - cu geam securizat.

FIXARE:

1. Nu montați pe o suprafață predispusă la vibrații.

2. Marcați poziția orificiului pentru fixarea suportului pe perete. Găuriți peretele la pozițiile marcate (șuruburile nu sunt furnizate). (vezi fig.1)

3. Însurubați suportul de fixare pe perete cu un șurub adecvat (vezi fig.2 și 3)


4. Conectați cablul de alimentare (H05RN-F3G1.0mm2 recomandat) cu cablul de intrare al produsului nostru prin cutia de joncțiune impermeabilă. Observați linia (-) a fiecărui cablu (see fig.5) (Obligativu a se utiliza o cutie de joncțiune cu grad protecție IP65 și asigurați-vă că strângeți șuruburile etanș)

5. Reglați proiectorul în poziția dorită. Porniți alimentarea pentru a vă asigura că produsul funcționează. Ajustați unghiul fasciculului de lumină în funcție de condițiile de utilizare.(vezi fig.5)

Cablul sau cablul flexibil extern al acestui corp de iluminat nu poate fi înlocuit; dacă cablul este deteriorat, corpul de iluminat va fi distrus.

Sursă de lumină care nu poate fi înlocuită: sursa de lumină a acestui corp de iluminat nu poate fi înlocuită; când sursa de lumină ajunge la sfârșitul duratei de viață, întregul corp de iluminat trebuie înlocuit.

Vă rugăm urmați cu strictețe instrucțiunile. Vă rugăm să nu deschideți produsul, pentru că se pierde garanția.

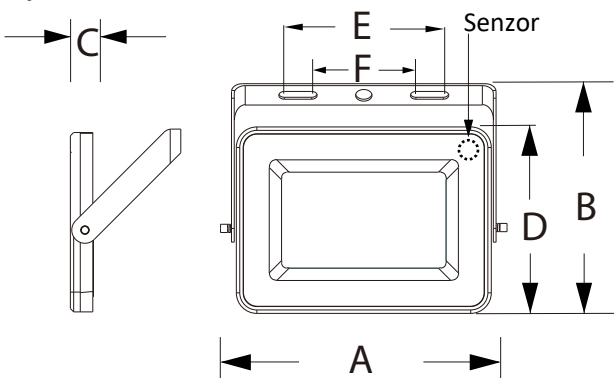

Unitate: mm


Type	A	B	C	D	E	F	G	H
10W	129	113	27	95	79.5	64.5	4.5	4.5
20W	154	124	27	107	99.5	84.5	4.5	4.5
30W	178	142	27	120	124	96	6	6
50W	214	168	32	143	114	90	6.2	6.2
70W	253	195	37	196	146	75	7.5	6
100W	253	195	37	196	146	75	7.5	6
150W	310	232	40	227	146	65	10	10
200W	355	252	42	250	190	110	10	13
300W	410	300	43	350	280	130	13	15
400W	500	350	45	350	280	130	13	15

Proiectoare LED fără senzor


Cod	Putere	Flux luminos
ST00341	10W	1000lm
ST00342	20W	2000lm
ST00343	30W	3000lm
ST00344	50W	5000lm
ST00345	70W	9100lm
ST00346	100W	13000lm
ST00347	150W	19500lm
ST00348	200W	26000lm
ST00349	300W	39000lm
ST00340	400W	52000lm

Proiectoare LED cu senzor

Cod	Putere	Flux luminos
ST00350	10W	1000lm
ST00351	20W	2000lm
ST00352	30W	3000lm
ST00353	50W	5000lm
ST00357	70W	7000lm
ST00358	100W	10000lm

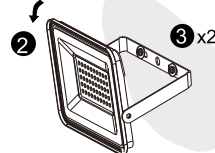

Șuruburile de instalat și a cutiei de joncțiune cu IP nu sunt inclusă în pachet și se recomandă insistent să utilizați extensii metalice și șuruburi cu garnitură pentru fixarea reflectorului.

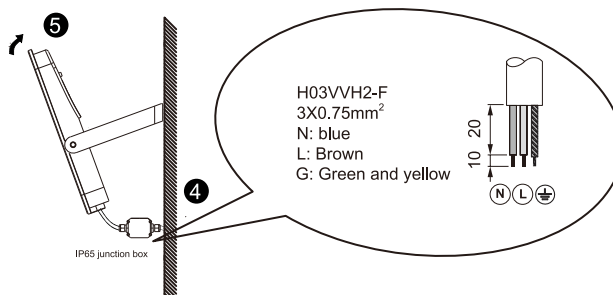

SPECIFICATIONS AND TECHNICAL DATA SHEET:

Fixture type: LED Floodlight
Input voltage: AC220-240V 50Hz/60Hz
Ambient temperature: -20°C<TA<50°C
Water Protection: IP65

Sensor details: detection zone of 0-10M, detection radius 120 degrees, and will stop in 30S after no more motion is detected.
Microwave motion sensor. The sensor is integrated in the luminaire in the upper left part of the product, looking from behind.

The light only works when the ambient brightness is less than 5-10 lux.

Switch the light ON at dusk and OFF at dawn when the ambient brightness is at 5-10 lux.

WARNING:

1. Make sure the power supply is turned off before installation
2. Read all of the following instructions before installing the product.
3. The user must prepare the necessary accessories and spare parts (not supplied), including the junction box if necessary.
4. Earthing is required.
5. In case of damage to the glass shield, you must replace it immediately - with safety glass.


MOUNTING:

1. Do not mount on a surface prone to vibration.
2. Mark the position of the hole for mounting the bracket on the wall. Drill the wall at the marked positions (screws are not delivered). (See fig.1)
3. Screw the mounting bracket to the wall with a suitable screw and tighten the mounting bracket bolt. (see fig.2 and 3)
4. Connect the power cord (H05RN-F3G1.0mm2 recommended) with the input cable of our product through the junction box waterproof. See the line (-) of each cable (see fig.4) (Mandatory to use a junction box with degree of protection IP65 and be sure to tighten the screws tightly).
5. Adjust the luminary to the desired position and turn on the power to check if the product works. Adjust the angle of the light beam according to conditions of use. (See fig.5)

The external flexible cable or cord of this luminaire cannot be replaced; if the cord is damaged, the luminaire shall be destroyed.

Non-replaceable light source: the light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.

Please strictly follow the instructions. Please do not open the product, as the warranty is lost.

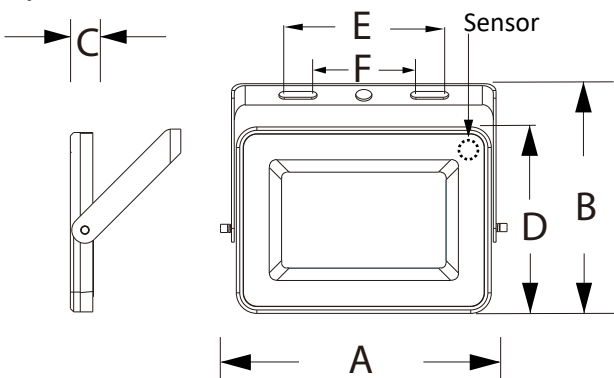

Unit: mm


Type	A	B	C	D	E	F	G	H
10W	129	113	27	95	79.5	64.5	4.5	4.5
20W	154	124	27	107	99.5	84.5	4.5	4.5
30W	178	142	27	120	124	96	6	6
50W	214	168	32	143	114	90	6.2	6.2
70W	253	195	37	196	146	75	7.5	6
100W	253	195	37	196	146	75	7.5	6
150W	310	232	40	227	146	65	10	10
200W	355	252	42	250	190	110	10	13
300W	410	300	43	350	280	130	13	15
400W	500	350	45	350	280	130	13	15

LED Flood Light without Sensor

No.	Power	Lumens
ST00341	10W	1000lm
ST00342	20W	2000lm
ST00343	30W	3000lm
ST00344	50W	5000lm
ST00345	70W	9100lm
ST00346	100W	13000lm
ST00347	150W	19500lm
ST00348	200W	26000lm
ST00349	300W	39000lm
ST00340	400W	52000lm

LED Flood Light with Sensor

No.	Power	Lumens
ST00350	10W	1000lm
ST00351	20W	2000lm
ST00352	30W	3000lm
ST00353	50W	5000lm
ST00357	70W	7000lm
ST00358	100W	10000lm

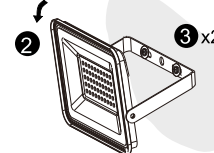

Installing screws and junction box with IP are not included in package, and it is strongly recommended to use metal expansion and screws with gasket to fix the floodlight.

