







PL	Instrukcja montażu	UA	Інструкція по установці
GB	Assembly instruction	H	Szerelési útmutató
D	Montageanleitung	RO	Instructiuni de montaj
SK	Návod na inštaláciu	FR	Instruction de montage
CZ	Pokyny k instalaci	IT	Istruzioni di montaggio
RUS	Инструкция по установке	ES	Instrucciones de ensamble
		AE	تعليمات التجميع


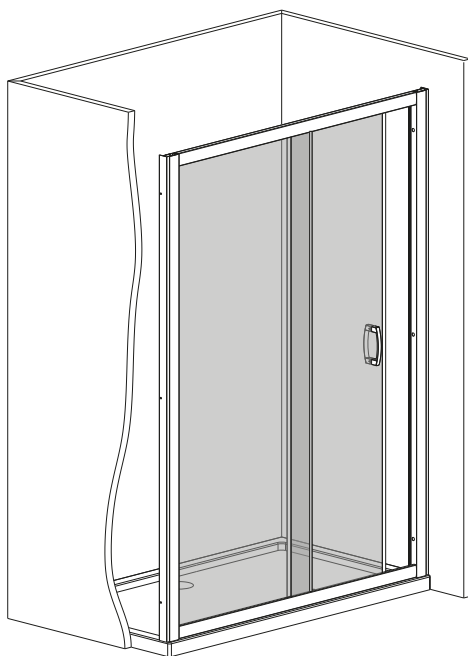




Premium Plus DWJ







PL	Instrukcja pokazuje montaż kabiny w wariantcie lewym
GB	Assembling instruction shows installation of left-side version
D	Die Montageanleitung stellt die linke Variante der Dusche dar
SK	Návod na inštaláciu sa vzťahuje na ľavé prevedenie
CZ	Návod zobrazuje instalaci sprchového koutu vlevo
RUS	В инструкции указан монтаж левого варианта кабины
UA	В інструкції вказаний монтаж лівого варіанту kabini
RO	Instructiunile de montaj se refera la instalarea cu deschidere pe stanga
H	A szerelési útmutató balos verzióra vonatkozik
FR	L'instruction montre un montage en version gauche
IT	Le istruzioni di montaggio mostrano l'installazione della versione sinistra
ES	La instrucción de montaje muestra la instalación de laversion del lado izquierdo
AE	يوضح تجميع التعليمات التثبيت من نسخة الجانب الأيسر

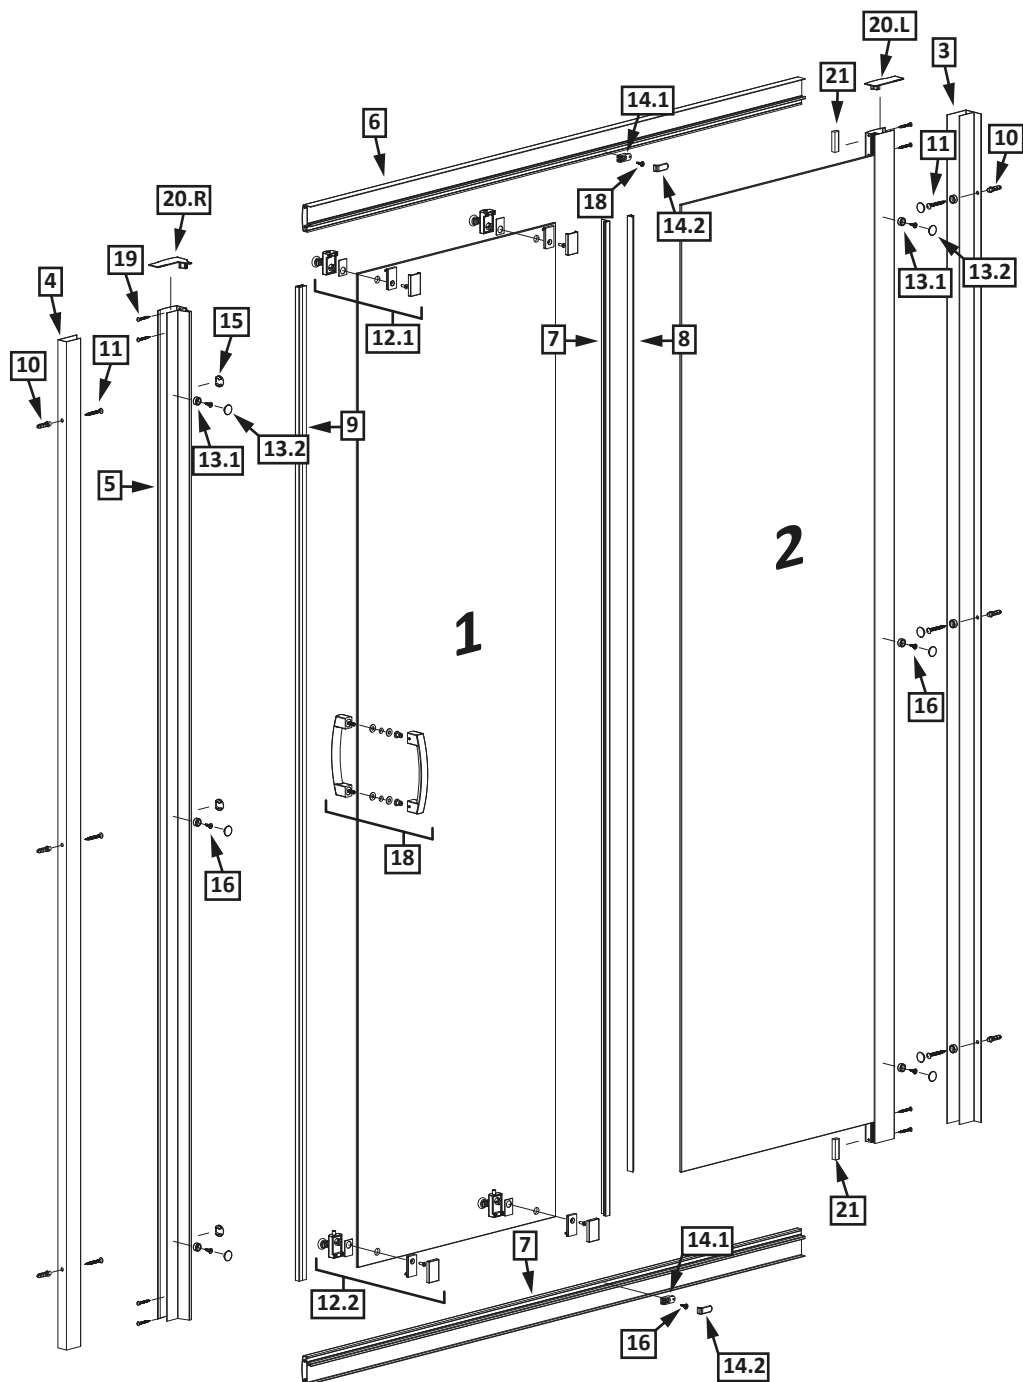

Nr No. číslo počet № Sorszám Numar N° N° N° رقم	Oznaczenie Mark Bezeichnung Označenie Označení обозначение Jelölés Componenta Symbole Simbolo Símbolo علامة	Sztuk Pcs. Stück Kus KS штук Db. Bucati Pcs Pz Pzas قطعة
1.		1
2.		1
3.		1
4.		1
5.		1
6.		2
7.		1
8.		1
9.		1
10.	 $\phi 8$	6
11.	 5x40 DIN 7981	6
12.1		2
12.2		2
13.1		9
13.2		9
14.1		2
14.2		2
15.		3
16.	 3,5x9,5 DIN 7981	8
17.	 3,5x25 DIN 7981	3
18.		1
19.		1
20.L 20.R		1 1
21.		2
22.	 $\phi 2,8$	1

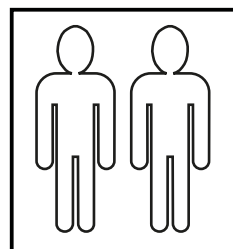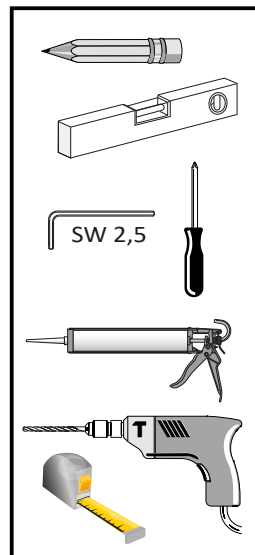

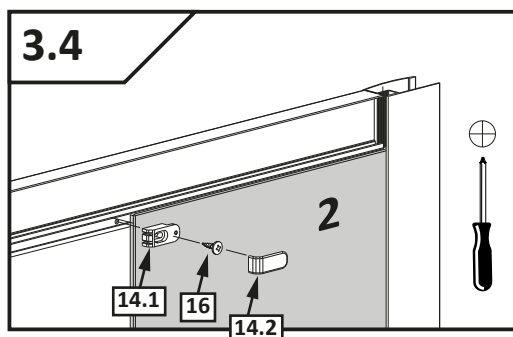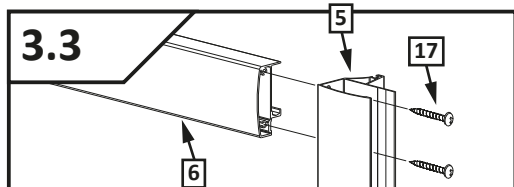

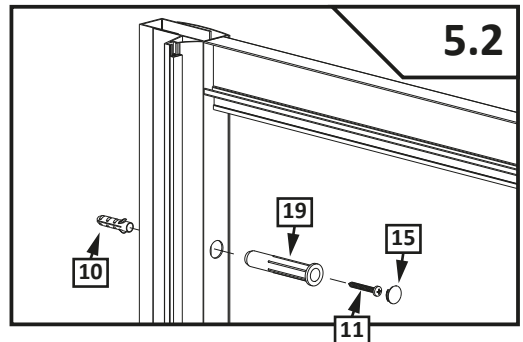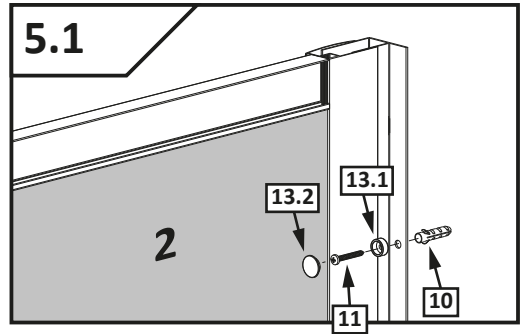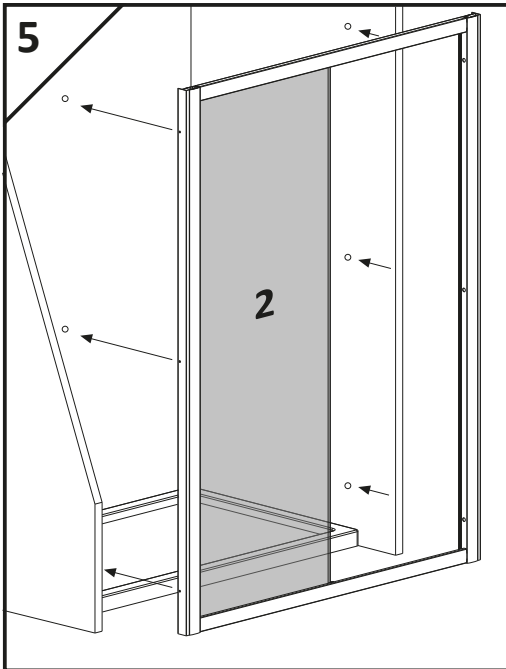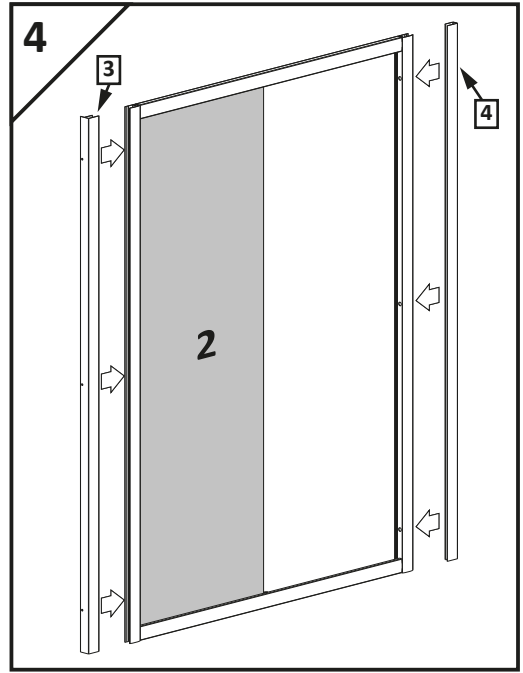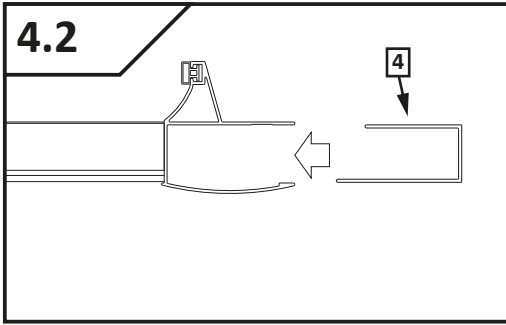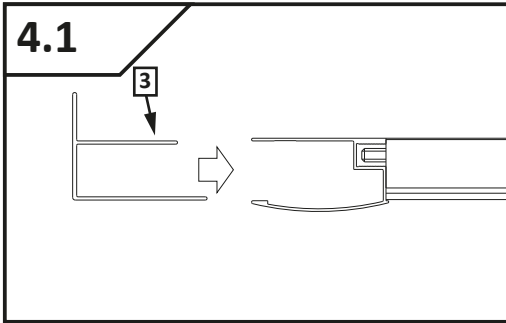

6.1

32mm

13.2 16 13.1

$\phi 2,8$

6.2





Technical drawing showing the installation of a hinge (13.1) into a window frame. A callout indicates a drill bit with diameter $\phi 2,8$ (16) is used to drill a hole. Another callout points to a washer (13.2) used in the assembly.

7



The diagram illustrates a three-stage process for assembling a mechanical component. A central vertical grey bar represents the component being assembled. Three rectangular boxes, labeled A, B, and C, are arranged vertically, each containing a different stage of the assembly process. Arrows point to the right from each box, indicating the sequence of steps.

- Stage A:** Shows a base plate with a central hole. A small cylindrical part is being inserted into the hole. The part has a flange with four small holes.
- Stage B:** Shows the cylindrical part fully inserted into the hole. A nut and washer are being used to secure the part from the opposite side.
- Stage C:** Shows the final assembly. A larger cylindrical part is being inserted into the central hole of the base plate, which is now secured with the nut and washer from Stage B.


6

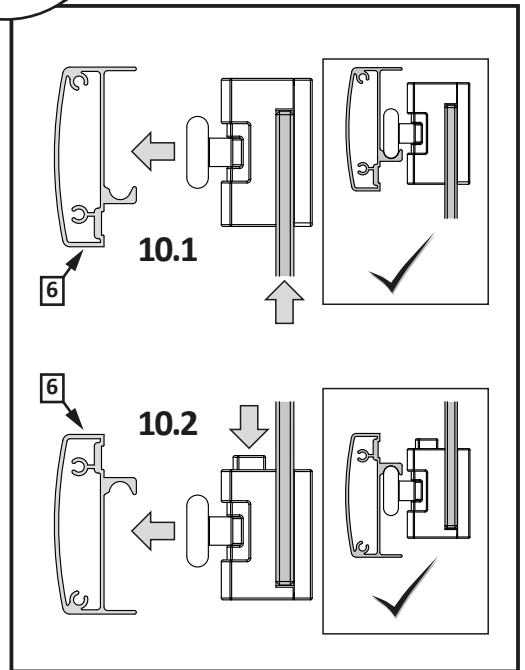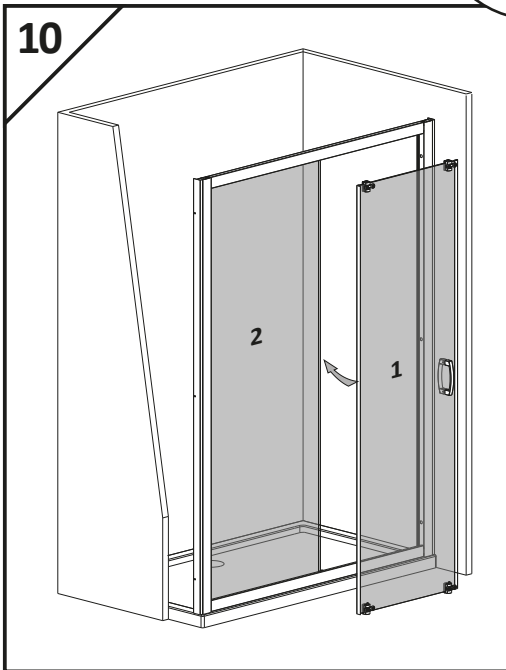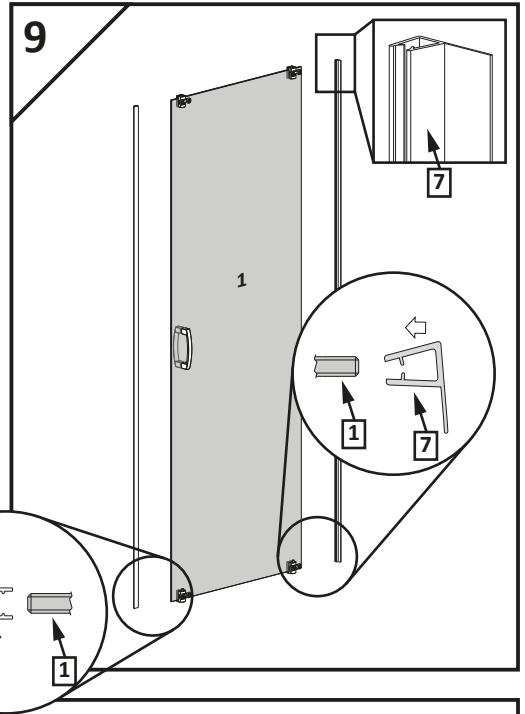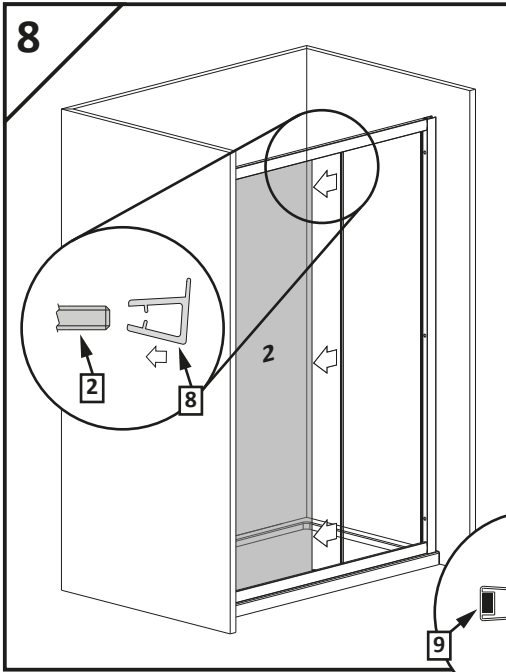


11

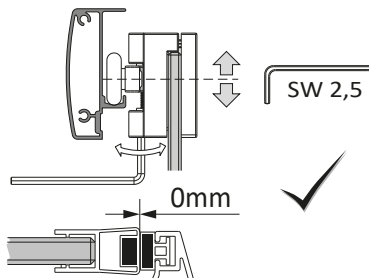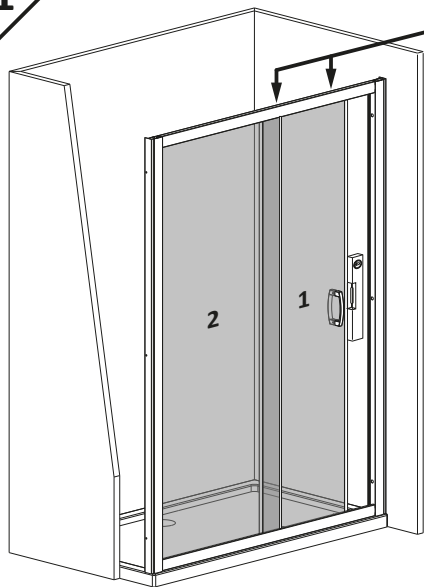

20.L

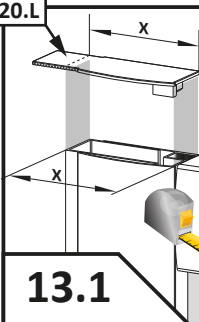

20.R


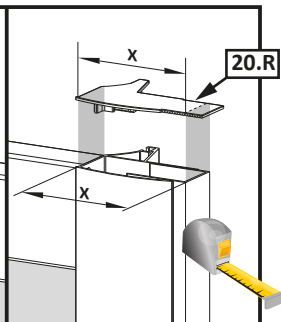


13.1


12

24h


SİLİKON

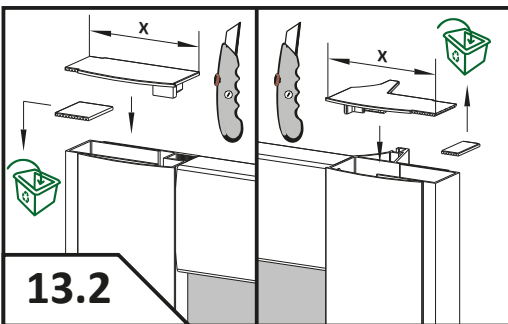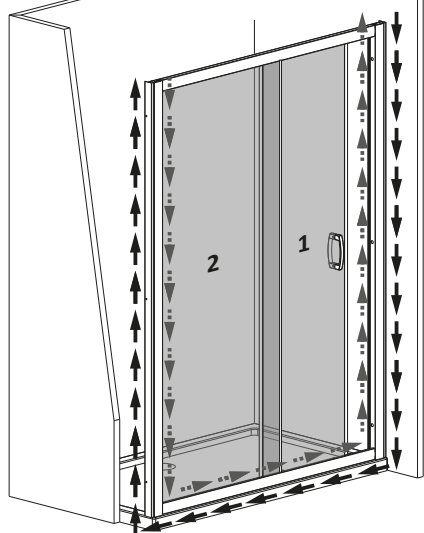


13.2





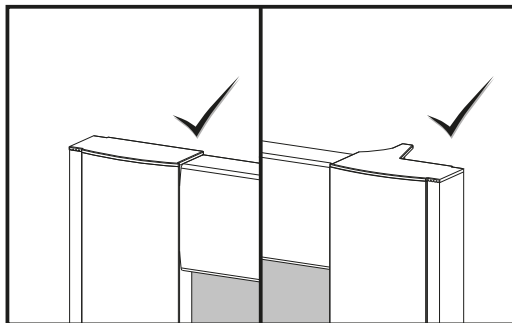


PL	Instrukcja montażu	UA	Інструкція по установці
GB	Assembly instruction	H	Szerelési útmutató
D	Montageanleitung	RO	Instrucțiuni de montaj
SK	Návod na inštaláciu	FR	Instruction de montage
CZ	Pokyny k instalaci	IT	Istruzioni di montaggio
RUS	Инструкция по установке	ES	Instrucciones de ensamble
		AE	تعليمات التجميع

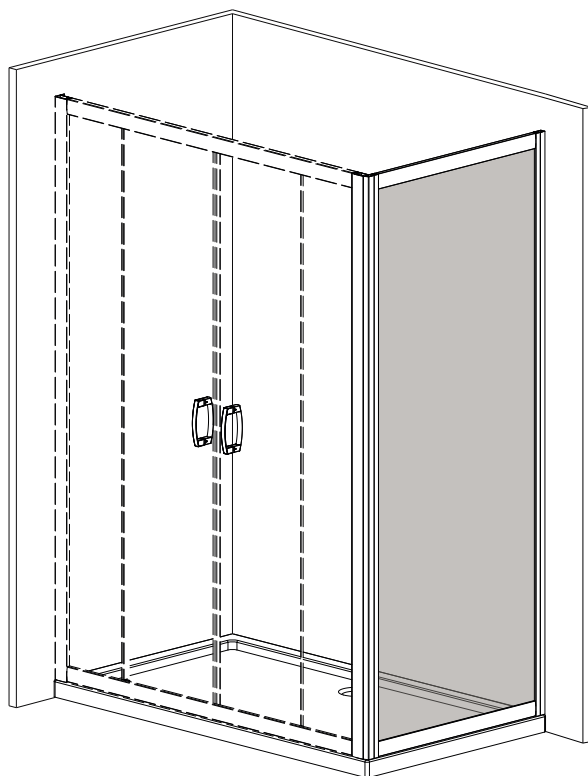

Premium Plus S

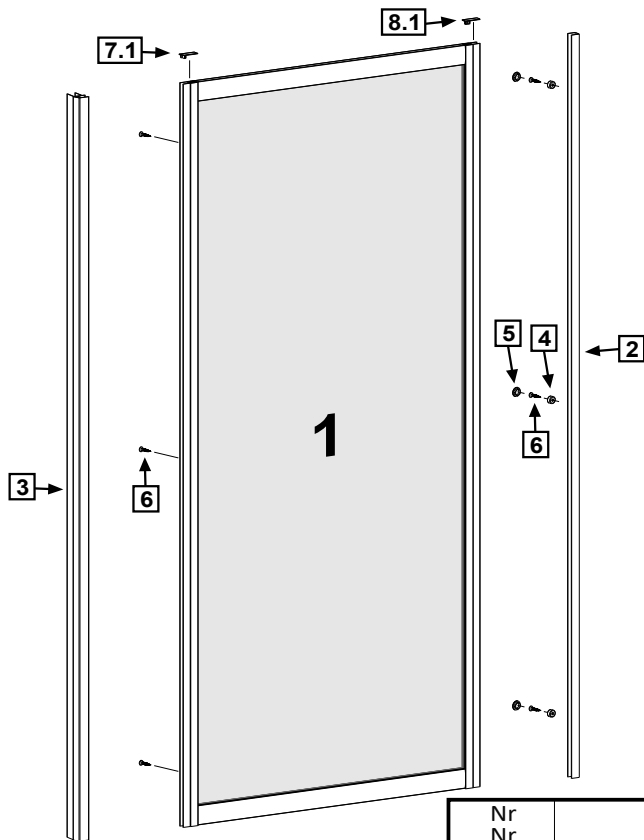

Nr Nr No. číslo počet No Sorszám Numar N° N° N° رقم	Oznaczenie Mark Bezeichnung Označenje Označení обозначение Jelölés Componenta Symbole Simbolo Símbolo علامة	Sztuk Pcs. Stück Kus KS штук Db. Bucati Pcs Pz Pzas قطع
1.		1
2.		1
3.		1
4.		3
5.		3
6.	 3,5x9,5 DIN 7981	6
7.1 7.2	 7.1  7.2	1 1
8.1 8.2	 8.1  8.2	1 1

