

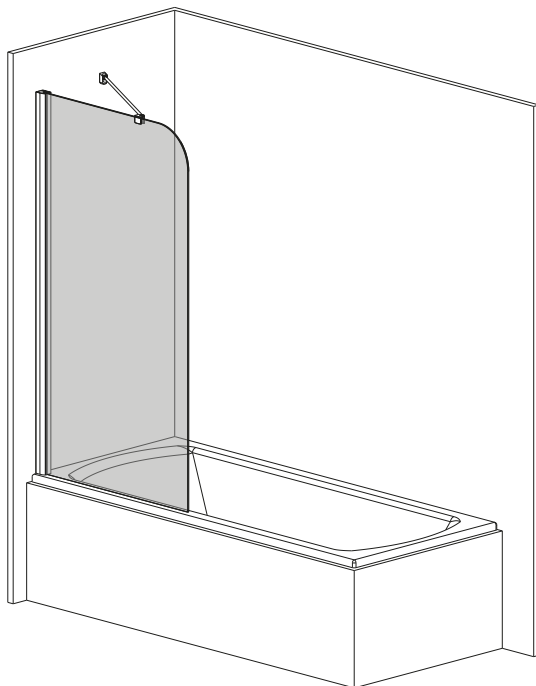
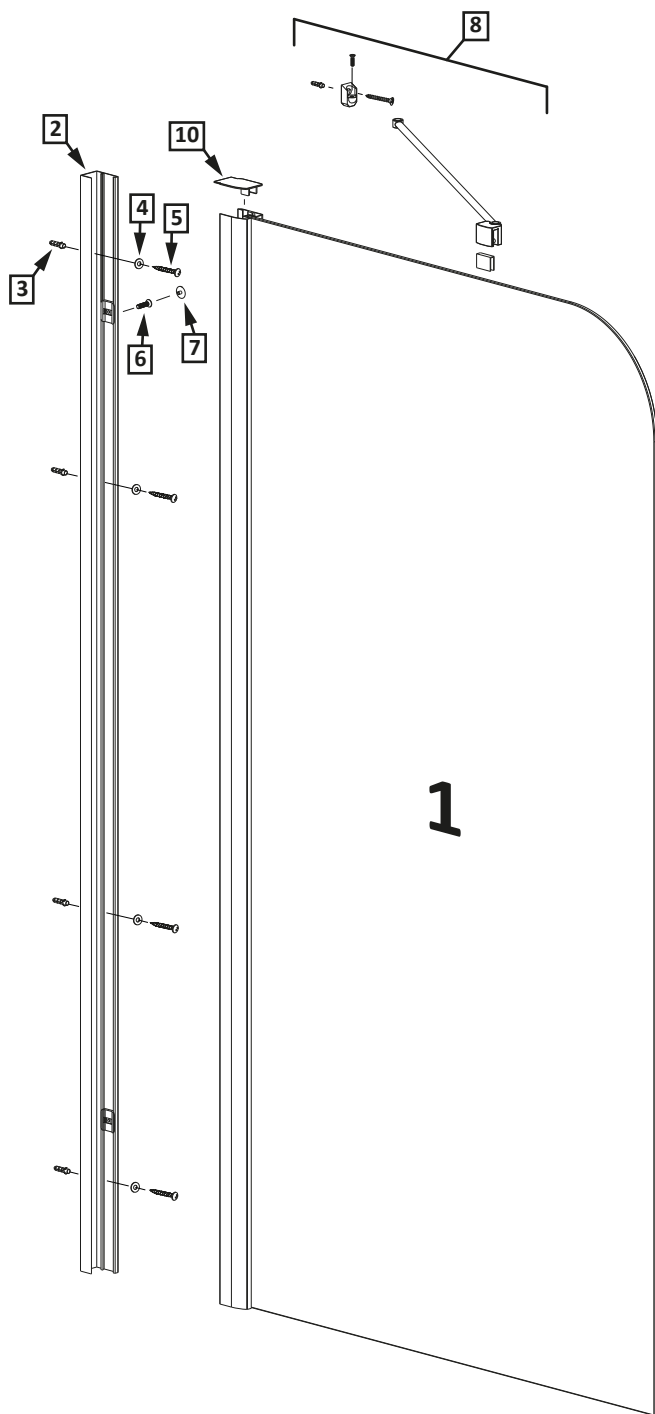








PL	Instrukcja montażu	UA	Інструкція по установці
GB	Assembly instruction	H	Szerelési útmutató
D	Montageanleitung	RO	Instrucțiuni de montaj
SK	Návod na inštaláciu	FR	Instruction de montage
CZ	Pokyny k instalaci	IT	Istruzioni di montaggio
RUS	Инструкция по установке	ES	Instrucciones de ensamble
		AE	تعليمات التجميع



Torrenta PNJ



Nr Nr. No. číslo počet № Sorszám Numar N° N° N° رقم	Oznaczenie Mark Bezeichnung Označenje Označení обозначение Jelölés Componenta Symbole Simbolo Símbolo علامة	Sztuk Pcs. Stück Kus KS штук Db. Bucati Pcs Pz Pzas قطع
1.		1
2.		1
3.	 $\phi 8$	4
4.	 M5 Typ A DIN 9021	4
5.	 5x40 DIN 7981	4
6.	 4x16 DIN 7991	2
7.		2
8.	 +  +  SW2,5 +  + 	1
9.	 SW 2,5	1
10.		1

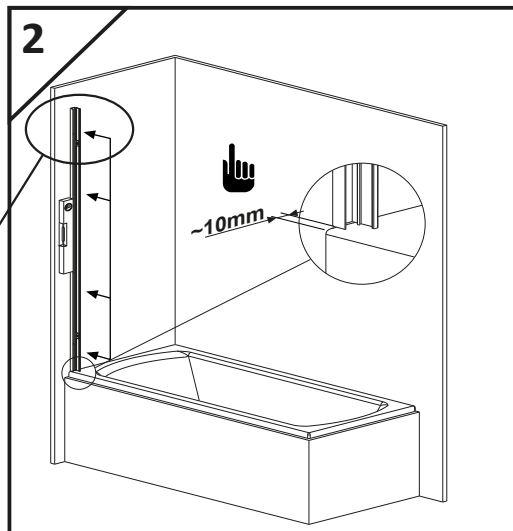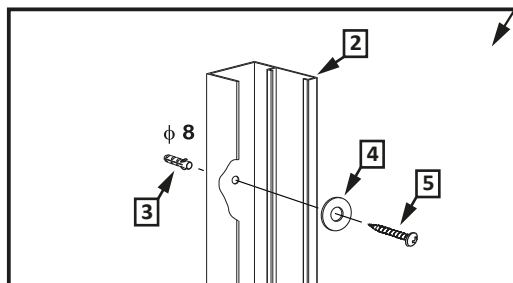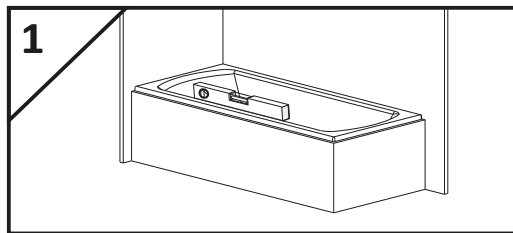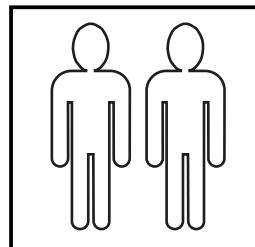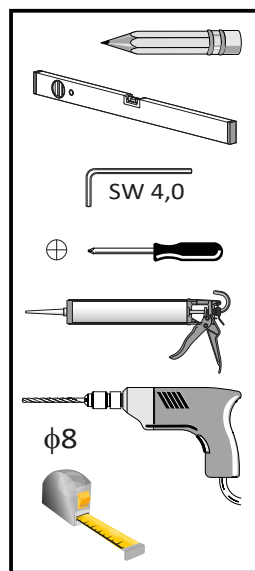

[illegible]

4

Diagram 4 illustrates the final assembly steps for the door:

- Top Left:** Shows the door (1) being aligned with the frame (2). A large arrow indicates the direction of movement. A circular inset shows a close-up of the door handle (6) being tightened with a screwdriver (SW2,5). The gap between the door and the frame is marked as 0mm.
- Bottom Left:** Shows the door (1) being aligned with the frame (2). A circular inset shows a close-up of the door handle (6) being tightened with a screwdriver (SW2,5).
- Right:** Shows the final assembled unit with the door (1) closed.

